



SEIKO

QUARTZ

Cal. H558A

**PARTS
CATALOGUE**

Cal. H558A

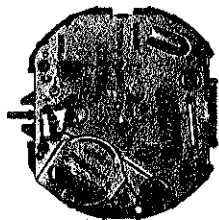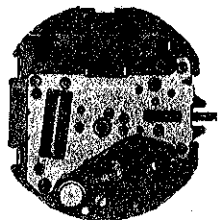

122 655



125 655



221 657



231 655



241 655



261 655



271 657



281 655



372 655



373 640



391 655



491 546




701 655



711 655



766 655

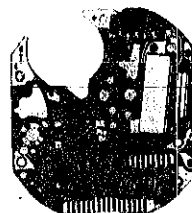

4001 555



4002 655



4032 655



4146 655



4216 655




4225 659



4239 655



4246 658

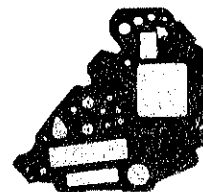

4259 655



4270 655



4290 655



4313 655




4313 656



4408 656



4408 657

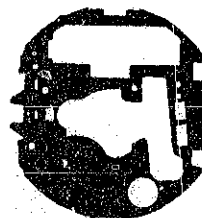

4408 666



4446 655




4450 655



4450 656



4456 655

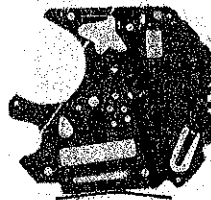

4457 655



☆4510 535



4521 860



☆ Maxell SR926W



022 424



022 493



Cal. H558A

Characteristics

Casing diameter : ϕ 28.0 mm
 Maximum height : 2.9 mm without battery
 Jewels : 3 J
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz. Cycles per second)
 Analogue indication
 Digital time and calendar display
 Alarm display
 Time signal
 Stopwatch display
 Tri-time function
 Train wheel setting
 Driving system : Step motor (2 poles)
 Display medium : Nematic liquid crystal, FE Mode
 Illuminating light
 Battery life indicator

PART NO.	PART NAME	PART NO.	PART NAME
122 655	Center wheel bridge	4408 666	Circuit block spacer
125 655	Train wheel bridge	4446 655	Crystal unit cushion
221 657	Center wheel & pinion	4450 655	Setting switch lever
231 655	Third wheel & pinion	4450 656	Change-over switch lever
241 655	Fourth wheel & pinion	4456 655	Switch lever cover
261 655	Minute wheel	4457 655	Circuit block cover
271 657	Hour wheel	☆4510 535	Liquid crystal panel
281 655	Setting wheel	☆4510 536	Liquid crystal panel
372 655	Joint stem (A)	4521 860	Reflecting mirror
373 640	Joint stem (B)	011 547	Lower hole jewel for step rotor
391 655	Train wheel setting lever	011 551	Upper hole jewel for fourth wheel
491 546	Dial washer	011 568	Upper hole jewel for step rotor
701 655	Fifth wheel & pinion	022 424	Train wheel bridge screw
711 655	Guide plate for winding stem	022 424	Coil block screw
766 655	Intermediate minute wheel	022 424	Setting wheel rest screw
4001 555	Circuit block	022 493	Circuit block screw
4002 655	Coil block	023 347	Train wheel setting lever adjusting pin
4032 655	Bulb block	023 369	Pin for change-over switch lever
4146 655	Step rotor	027 106	Tube for train wheel bridge
4216 655	Insulator for circuit	☆027 107	Tube for circuit block screw (A)
4225 659	Battery clamp	☆027 108	Tube for circuit block screw (B)
4239 655	Rotor stator	027 109	Tube for coil block screw
4246 658	Buzzer lead terminal	027 110	Tube for setting wheel rest screw
4259 655	Anti-magnetic shield plate	027 725	Intermediate minute wheel
4270 655	Battery connection (-)	027 726	Minute wheel pin
4290 655	Rotary step switch	☆Maxell SR926W	Silver oxide battery
4313 655	Connector (A)		
4313 656	Connector (B)		
4408 656	Setting wheel rest		
4408 657	Buzzer lead terminal (B)		


Remarks :

Liquid crystal panel

☆4510 535 } Be sure that the combination between the color of panel cover and liquid crystal panel
 ☆4510 536 } should be matched according to the "SEIKO Quartz Casing Parts Catalogue".

Tube for circuit block screw (A), (B)

☆027 107 }Refer to the illustration below.
 ☆027 108 }

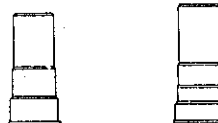

Battery

☆Maxell SR926W.....The substitutive battery might be added to the applied battery in the future.
 In that case, please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".

☆⇨ Please see remarks.
 Part numbers in light letters are not shown in photos.