


SEIKO

QUARTZ

Cal. 9022A

**PARTS
CATALOGUE**

Cal. 9022A

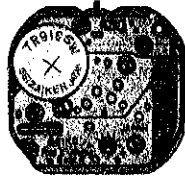

122 856



125 854



☆221 848



231 855



☆241 848



261 856



 
☆271 848



281 856



282 858



☆354 856



383 855



384 856



389 855



391 856



491 840



604 854




701 855



737 855



766 855

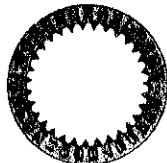

☆801 543




802 855



808 855



810 855

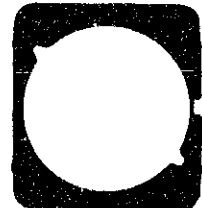

☆884 985



962 855



986 855



4001 851



4002 855



4050 884



4146 855



4216 858



4239 855



4259 855



4270 856



4271 855



4408 856



4450 855



☆Maxell SR916SW



022 436



022 754

3/1

Cal. 9022A

Characteristics

Casing diameter : ϕ 23.3 mm
 Maximum height : 2.2 mm
 Jewels : 5 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor (2 poles)
 Regulation system: Rotary step switch
 Train wheel setting
 Calendar (Date)
 Instant setting device for date calendar

| PART NO. | PART NAME | PART NO. | PART NAME |
|----------|--|-----------------|---|
| 122 856 | Center wheel bridge | 022 436 | Setting wheel plate complete screw |
| 125 854 | Train wheel bridge | 022 436 | Train wheel bridge screw |
| ☆221 848 | Center wheel & pinion | 022 754 | Date dial guard screw |
| ☆221 857 | | 023 340 | Date corrector wheel rocking lever pin |
| 231 855 | Third wheel & pinion | 023 377 | Date dial guard tube |
| ☆241 848 | Fourth wheel & pinion | 027 127 | Tube for setting wheel plate complete screw |
| ☆241 857 | | | |
| 261 856 | Minute wheel | 027 134 | Tube for train wheel bridge |
| ☆271 848 | Hour wheel | ☆027 145 | Tube for circuit bridge (A) |
| ☆271 857 | | ☆027 157 | Tube for circuit bridge (B) |
| 281 856 | Setting wheel | 027 745 | Train wheel setting lever pin |
| 282 858 | Clutch wheel | 027 746 | Yoke pin |
| ☆354 856 | Winding stem | 027 747 | Regulating switch lever pin |
| 383 855 | Setting lever | 027 750 | Setting lever pin |
| 384 856 | Yoke | ☆Maxell SR916SW | Silver oxide battery |
| 389 855 | Setting lever spring | ☆SEIKO TR916SW | Silver (II) oxide battery |
| 391 856 | Train wheel setting lever | | |
| 491 840 | Dial washer | | |
| 604 854 | Setting wheel plate complete | | |
| 701 855 | Fifth wheel & pinion | | |
| 737 855 | Date corrector setting wheel | | |
| 766 855 | Intermediate minute wheel | | |
| ☆801 543 | Date dial | | |
| 802 855 | Date driving wheel | | |
| 808 855 | Date dial guard | | |
| 810 855 | Date jumper | | |
| ☆884 985 | Holding ring for dial | | |
| 962 855 | Intermediate wheel for calendar correction | | |
| 986 855 | Date corrector wheel rocking lever | | |
| 4001 851 | Circuit block | | |
| 4002 855 | Coil block | | |
| 4050 884 | Circuit bridge plate | | |
| 4146 855 | Step rotor | | |
| 4216 858 | Insulator for battery | | |
| 4239 855 | Rotor stator | | |
| 4259 855 | Anti-magnetic shield plate | | |
| 4270 856 | Battery connection (-) | | |
| 4271 855 | Battery connection (+) | | |
| 4408 856 | Circuit block spacer | | |
| 4450 855 | Regulating switch lever | | |
| 011 568 | Upper hole jewel for step rotor | | |
| 011 570 | Lower hole jewel for step rotor | | |
| 011 570 | Upper hole jewel for third wheel | | |
| 011 570 | Upper hole jewel for fourth wheel | | |
| 011 570 | Upper hole jewel for fifth wheel | | |
| 022 436 | Circuit bridge plate screw | | |

☆⇨ Please see remarks on the reverse page.
 Part numbers in light letters are not shown in photos.



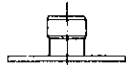
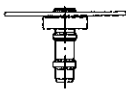
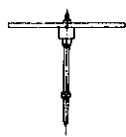
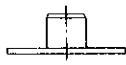
Cal. 9022A

Remarks :

Center wheel & pinion, Fourth wheel & pinion, Hour wheel

There are two different types as specified below.

Combination :
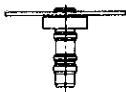
| Type | Center wheel & pinion | Fourth wheel & pinion | Hour wheel |
|------|---|---|---|
| a |  ☆221 848 |  ☆241 848 |  ☆271 848 |
| b |  ☆221 857 |  ☆241 857 |  ☆271 857 |

Winding stem

- ☆354 856.....Refer to the photograph on the front page.
 If the combination of the winding stem and case is unknown, check the case number and refer to "SEIKO Quartz Casing Parts Catalogue" to choose a corresponding winding stem.

Holding ring for dial

- ☆884 985.....The type of holding ring for dial is determined based on the design of cases and dials. Check the case number and refer to "SEIKO Quartz Casing Parts Catalogue" to choose an appropriate holding ring for dial.

Date dial

- ☆801 543 (Black figures on white background) } Used when both the crown and the calendar frame are located at 3 o'clock position.
 ☆801 547 (Black figures on gold background) }
 ☆801 544 (Black figures on white background) } Used when the crown is located at 3 o'clock position and the calendar frame 6 o'clock position.
 ☆801 545 (Black figures on gold background) }

If any other type of date dial is required, specify ① Cal. No. ② The crown position ③ The calendar frame position ④ Dial No. and ⑤ Color of date dial.

Tube for train wheel bridge

- ☆027 145 } Refer to the illustration below for the position of Tube for train wheel bridge.
 ☆027 157 }



☆027 145



☆027 157

Battery

- ☆Maxell SR916SW } The substitutive battery might be added to the applied battery in the future. In that case, please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".
 ☆SEIKO TR916SW }
- Note that SEIKO battery is marked with "SEIZAIKEN" on its (+) side.