


Calibre No.	<b>6118A</b>	Style Name	
Basic Calibre	6106A	25J Catalog No.	61-06-1

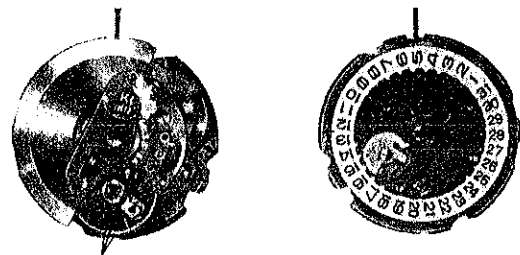


Cal. 6118A

**Characteristics**

Casing diameter : 27.00  $\phi$  mm  
 Maximum height : 5.15 mm  
 Vibrations per hour : 21,600  
 Automatic winding with sweep second  
 Calendar (date)  
 Pushing instant date setting  
 "Diashock" Shock Resistant Device

Catalog No.

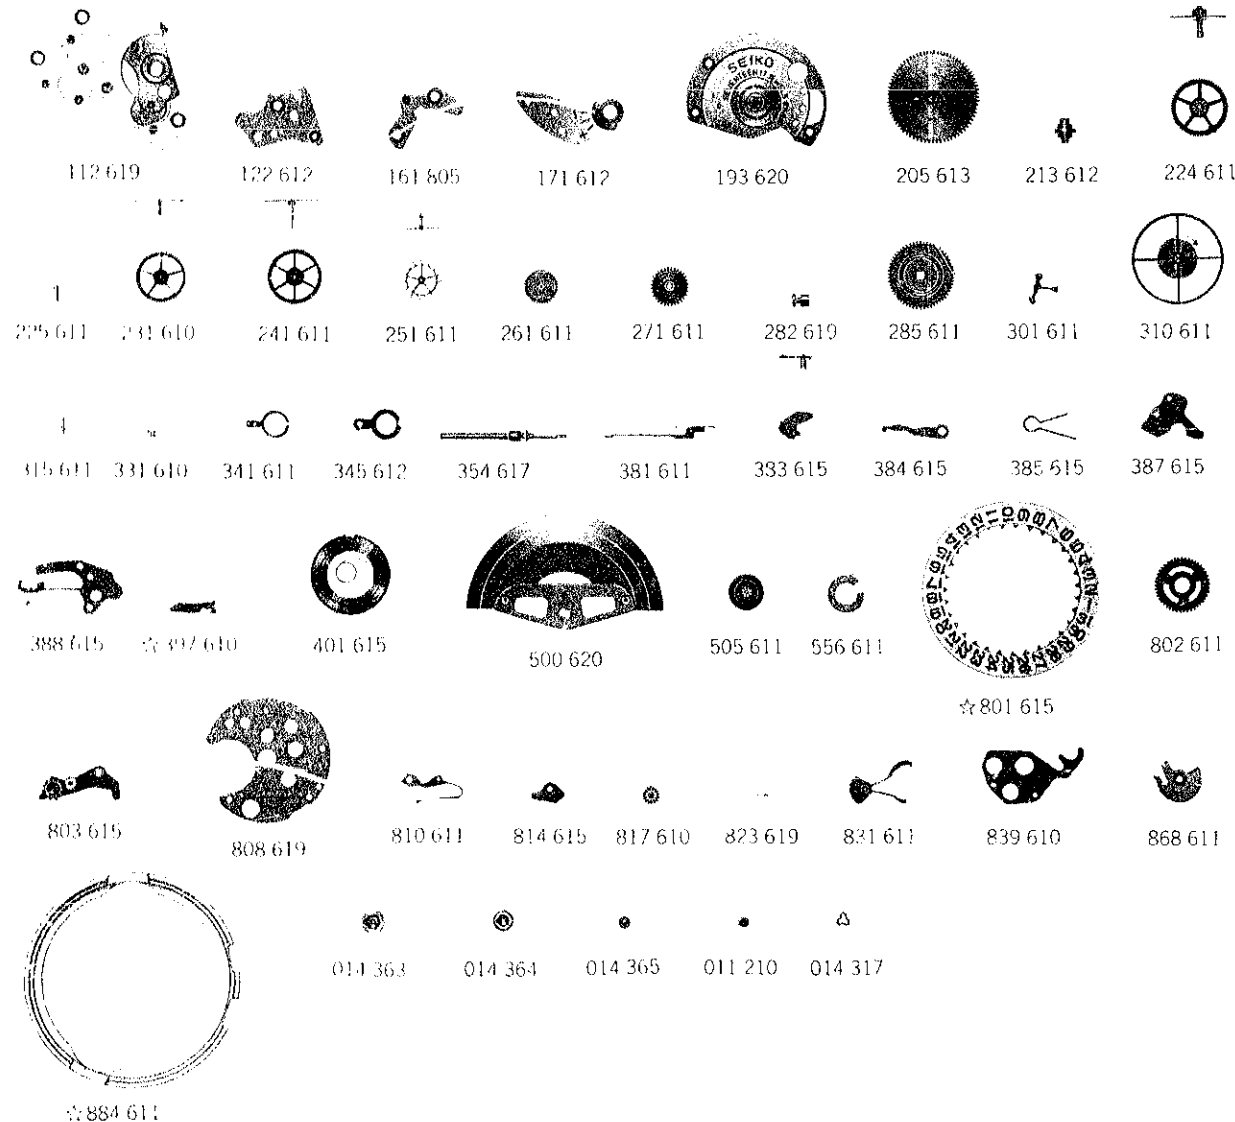

022 150	022 252	022 269	022 351	022 458	022 467	022 468	022 470	022 471	022 493
022 662	022 677	022 760	022 761						2/1

Calibre No.		Jewels	Style Name	
<b>6118A</b>		<b>17j</b>		
⇨ Basic Calibre 6106A 25J Catalog No.61-06-1				
PART NO.	PART NAME	PART NO.	PART NAME	
112 619	Barrel & train-wheel bridge	823 619	Eccentric post	
122 612	Center wheel bridge	831 611	Pawl lever with jewel	
161 805	Pallet cock	839 610	Holder for transmission wheel & pawl lever	
171 612	Balance cock	868 611	Date driving wheel holder	
193 620	Framework for automatic device with ball-bearing	☆884 611	Holding ring for dial	
205 613	Complete barrel with arbor	014 363	Diashock upper frame	
213 612	Barrel arbor	014 364	Diashock lower frame	
224 611	Center wheel with cannon pinion	014 365	Diashock hole jewel with frame	
225 611	Cannon pinion	011 210	Diashock cap jewel	
231 610	Third wheel & pinion	014 317	Diashock spring	
241 611	Sweep second wheel & pinion	022 150	Stud screw	
251 611	Escape wheel & pinion	022 252	Holder screw for transmission wheel & pawl lever	
261 611	Minute wheel	022 269	Minute wheel bridge screw	
271 611	Hour wheel	022 351	Center wheel bridge screw	
282 619	Clutch wheel	022 458	Screw for oscillating weight	
285 611	Ratchet wheel	022 467	Ratchet wheel screw	
301 611	Jewelled pallet fork & staff	022 468	Pallet cock screw	
310 611	Balance complete with stud	022 470	Framework screw for automatic device with ball-bearing	
315 611	Balance staff	022 471	Click screw	
331 610	Roller with jewel	022 493	Bridge screw	
341 611	Regulator	022 662	Setting lever spring screw	
345 612	Stud holder	022 677	Date driving wheel screw	
354 617	Winding stem	022 760	Date dial guard screw	
381 611	Click	022 760	Setting wheel lever plate screw	
383 615	Setting lever with axle	022 761	Dial screw	
384 615	Yoke (Clutch lever)	011 145	Upper hole jewel for center wheel	
385 615	Yoke spring (Clutch lever spring)	011 146	Lower hole jewel for center wheel	
387 615	Minute wheel bridge	011 306	Lower hole jewel for third wheel	
388 615	Setting lever spring	011 406	Upper hole jewel for escape wheel	
☆397 610	Lever for unlocking stem	011 406	Lower hole jewel for escape wheel	
401 615	Mainspring with slipping attachment	011 503	Upper hole jewel for pallet	
500 620	Oscillating weight	011 503	Lower hole jewel for pallet	
505 611	Transmission wheel	011 147	Upper hole jewel for transmission wheel	
556 611	Date finger	011 147	Lower hole jewel for transmission wheel	
☆801 615	Date dial	023 150	Tube for pallet cock screw (Cylinder type)	
802 611	Date driving wheel	023 151	Tube for bridge screw	
803 615	Setting wheel lever complete	023 170	Tube for pallet cock screw (Recessed type)	
808 619	Date dial guard	023 171	Tube for framework screw of automatic device	
810 611	Date jumper			
814 615	Setting wheel lever plate			
817 610	Intermediate date wheel			

**Remarks :**

Lever for unlocking stem

☆397 610.....Used only for the one-piece water-resistant case.

If the lever for unlocking stem is required in any other type, specify the dial No. or the case No.

Date dial

☆801 615(Black figures on white background)..... Used when the crown is located at 3o'clock and the date frame at 3o'clock.

If the date dial is required in any other type, specify ① the Cal. No. ② the crown position ③ the date frame position and ④ the dial No.

Holding ring for dial

☆884 611.....Used for watches except one-piece water-resistant watch.

If the holding ring for dial is required in any other type, specify the dial No. or the case No.